


B6-F INSTALLATION INSTRUCTIONS

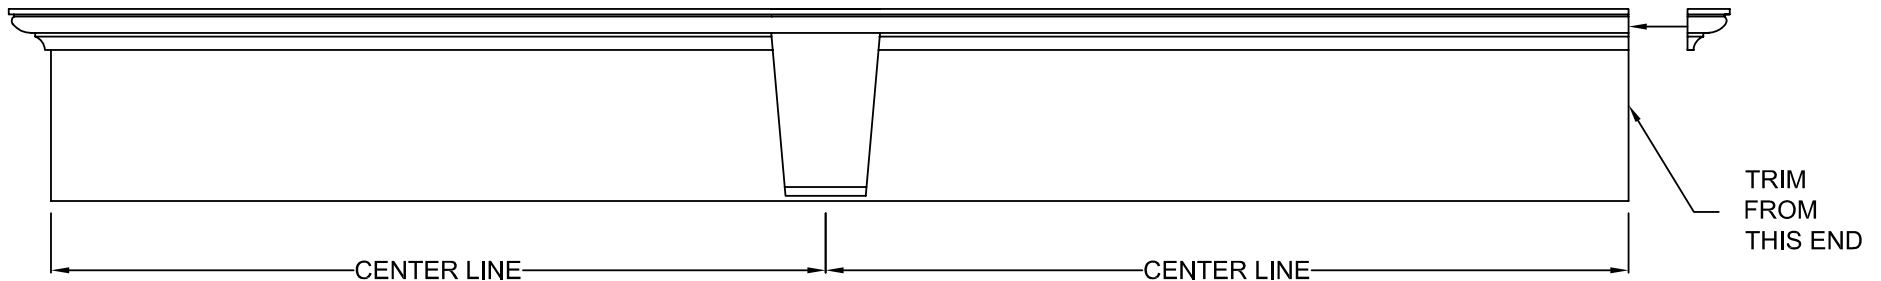

Installing the Adjustable Frieze Board Head: The Frieze Board Head is designed to accommodate several entrance opening widths of 6'-4", 6'-0", 5'-4", 5'-0". To reduce the Frieze Board Head see the following:

1. Determine the actual length required based on the frame or unit opening dimension. On one end on the Frieze Board the return has been a cut-off. This end should be used for all adjustments by simply cutting the portion not needed.
2. To finish the installation the enclosed return portion should be re-applied using Bond&Fill™ Structural Adhesive. Bond & Fill is sold at your local lumber yard or on-line at www.bondfill.com.
3. The key block can then be applied to the center of the Frieze Board Head with brads and Bond&Fill™ Structural Adhesive. Bond & Fill is sold at your local lumber yard or on-line at www.bondfill.com.
4. **Finishing:** Although ATW EntryTRIM doesn't require a topcoat of finish we recommend one coat of 100% Acrylic Latex paint to insure years of lasting beauty.