

B6-P INSTALLATION INSTRUCTIONS

FIG. 1.


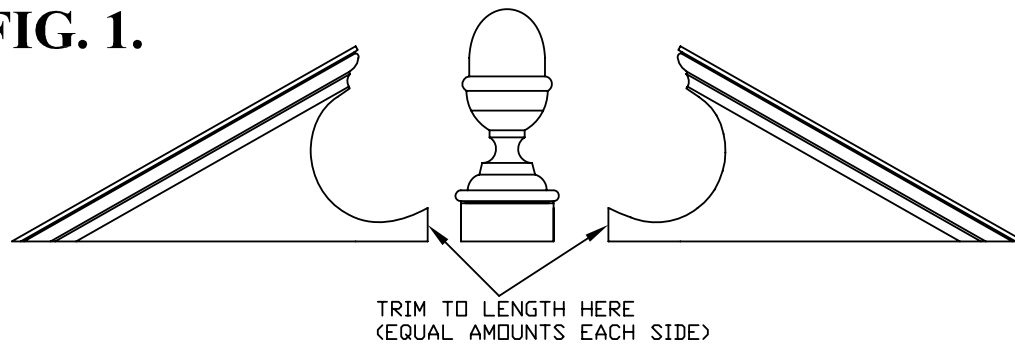


FIG. 2.

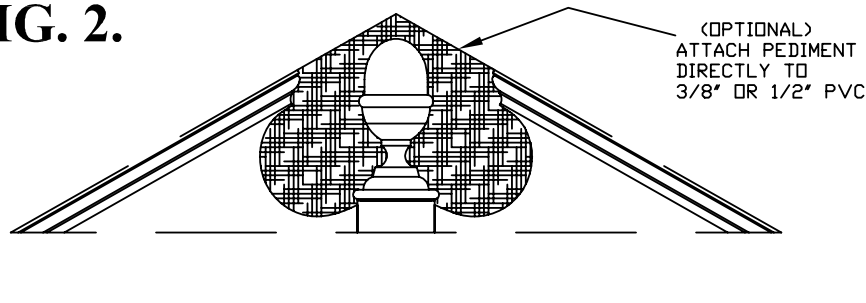

Installing the Adjustable B6-P Head: The Pediment Head is designed to accommodate several entrance opening widths of 6'-4", 6'-0", 5'-4" and 5'-0"

1. To reduce the Pediment Head: Determine the actual length required based on frame or unit opening dimension. Cut equal amounts from the scrolled portion of the head by making squared cuts on the ends of each piece. **SEE FIG. 1.**
2. The Pediment Head is designed to set on top of the top shelf or frieze board. The center block (4-1/2" wide) finial base and acorn are then placed between the Pediment Head scrolls.
3. As an option the Pediment Head may be attached to a piece of 1/4" plywood. This will simplify applying the siding since it can be butted to a square edge rather than a circular scrolled portions. A drip cap or flashing should be used. The head can now be nailed off. **SEE FIG. 2.**
4. **Finishing:** Although ATW EntryTRIM doesn't require a topcoat of finish we recommend one coat of 100% Acrylic Latex paint to insure years of lasting beauty.