


B6-D **INSTALLATION** **INSTRUCTIONS**

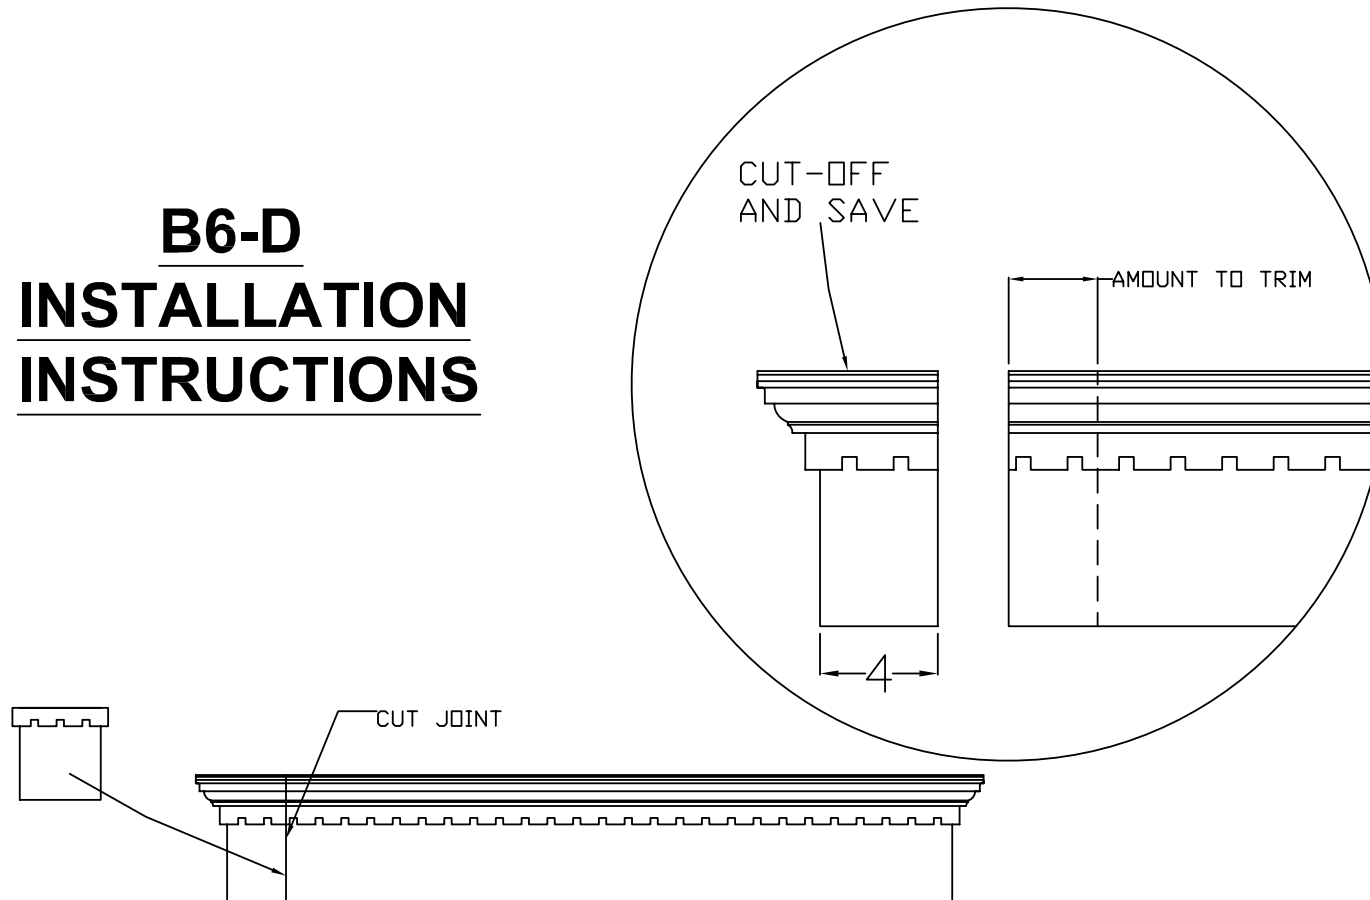

Installation of Dentil Head: The Dentil Head is designed to fit over a 6'-0" double door. It is to be used in conjunction with the B-9 Pilasters only. Place the adjustable head backer strip (1-5/8") on top of the inside pilaster backer strips. The shelf sits centered in the opening sitting directly above the fluted pilasters and in front of backer strips. The Dentil Head sits centered on the shelf. The 6'-4" Dentil Head has adjustable Dentil Blocks which are included.

For trimming: first determine the overall amount to be reduced, then cut approximately 4" off one end (it is important to cut as close as possible to a full dentil "tooth"). Next remove the predetermined amount from the cut end and re-apply the finished end using Bond&Fill™ Structural Adhesive. Bond & Fill is sold at your local lumber yard or on-line at www.bondfill.com. Apply the Dentil Blocks to the head to cover the the cut joint and at an equal position on the other end. These blocks are shipped loose and are to be aligned above the fluted pilasters. A drip cap or flashing should be used. The head can now be fastened.

Finishing: Although ATW EntryTRIM doesn't require a topcoat of finish we recommend one coat of 100% Acrylic Latex paint to insure years of lasting beauty.